


AB-RTC-PRM-ANM

Real Time Clock

Includes: AB-RTC-PRM-ANM

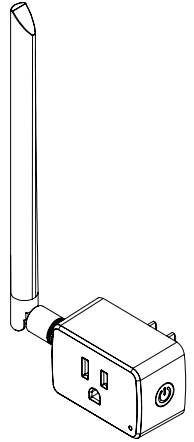

INSTALLATION INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN SERIOUS INJURY OR DAMAGE TO PROPERTY

For your safety, thoroughly read these instructions and warnings in its entirety prior to installing or servicing this product. These instructions do not attempt to cover all installation and maintenance circumstances. If you do not understand these instructions or if additional information is needed, please contact your Aleo Lighting customer service.

WARNING

RISK OF FIRE OR ELECTRIC SHOCK

This product must be installed and serviced by a professional electrician in accordance with applicable federal, state, and local laws, regulations, and electrical code. If not qualified, do not attempt installation of this product. Contact a qualified electrician.

WARNING

RISK OF FIRE, ELECTRIC SHOCK, or PERSONAL INJURY

To avoid risk of electrical shock, turn off power before installing or servicing. Verify that supply voltage is correct by comparing with the input voltage on the luminaire label. Make all electrical and ground connections in accordance with NEC and any applicable code requirements.

WARNING

RISK OF PERSONAL INJURY

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. Do not make or alter any open holes in any of the enclosures with wiring or electrical components during installation.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

WARNING

This luminaire is made for permanent installation in ordinary (non-hazardous) locations in accordance with NEC code and all applicable local and federal codes. Do not use in applications with limited ventilation or high ambient temperature enclosures.


AB-RTC-PRM-ANM

Real Time Clock


TO INSTALL:

AB-RTC-PRM-ANM COMMISSIONING

Adding a Real Time Clock to a project allows it to act as the source of the current time that is shared with other devices in the network.

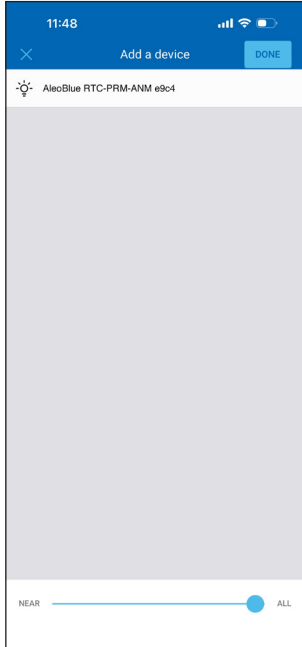

Choose the Zone the device is physically located. Go to the “DEVICES” tab. Add the device into this Zone.

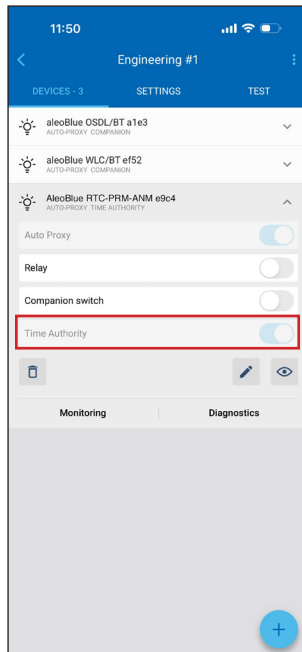

Select the device you just added, and tap the “Time Authority” toggle switch to enable it as Time Authority.

NOTE: One project can only have one Time Authority.

AB-RTC-PRM-ANM

Real Time Clock

TO INSTALL:

ADDING / PROVISIONING TO ALEOBLUE WIRELESS BLUETOOTH® MESH NETWORK

Utilize the AleoBlue iOS app to provision and add to Bluetooth® Mesh network.




Download the iOS
AleoBlue App



Watch the
Commissioning
Tutorial Video

PRODUCT DIAGRAM

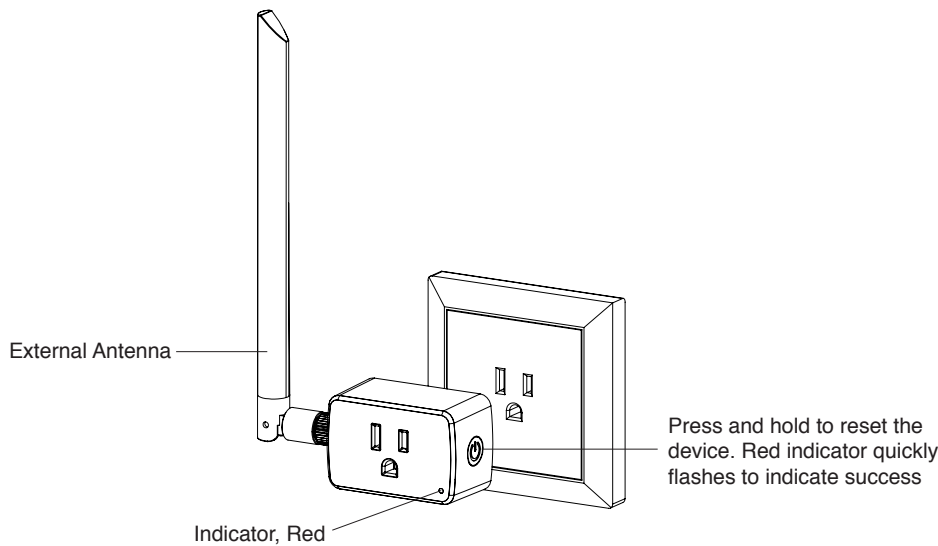

PRODUCT INSTALLATION

1. Screw the external antenna onto the main body.
2. Connect device to NEMA 5-15 Receptacle.

RATINGS

Input Power	120V
Operating Temperature	-10°C~40°C
IP Rating	IP20
Max. Bluetooth® Range*	350ft.

*Bluetooth® Range is highly dependent on the integration of fixtures, surrounding environment and conditions. It is recommended to conduct testing for range accuracy.



© 2026 Aleo Lighting, Inc. All rights reserved. For informational purposes only. Reproduction in whole or part is prohibited without prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequences of its use.