 


AB-SPIR-WBM-AVK

Wall-Box PIR Occupancy Sensor / Dimmer Switch

Includes: AB-SPIR-WBM-AVK

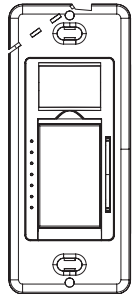

INSTALLATION INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN SERIOUS INJURY OR DAMAGE TO PROPERTY

For your safety, thoroughly read these instructions and warnings in its entirety prior to installing or servicing this product. These instructions do not attempt to cover all installation and maintenance circumstances. If you do not understand these instructions or if additional information is needed, please contact your Aleo Lighting customer service.

WARNING

RISK OF FIRE OR ELECTRIC SHOCK

This product must be installed and serviced by a professional electrician in accordance with applicable federal, state, and local laws, regulations, and electrical code. If not qualified, do not attempt installation of this product. Contact a qualified electrician.

WARNING

RISK OF FIRE, ELECTRIC SHOCK, or PERSONAL INJURY

To avoid risk of electrical shock, turn off power before installing or servicing.
Verify that supply voltage is correct by comparing with the input voltage on the luminaire label
Make all electrical and ground connections in accordance with NEC and any applicable code requirements

WARNING

RISK OF PERSONAL INJURY

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects
Do not make or alter any open holes in any of the enclosures with wiring or electrical components during installation.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

 
Suitable for Dry Location

AB-SPIR-WBM-AVK


TO INSTALL:

Wall-Box PIR Occupancy Sensor / Dimmer Switch

TURN OFF POWER BEFORE INSTALLING

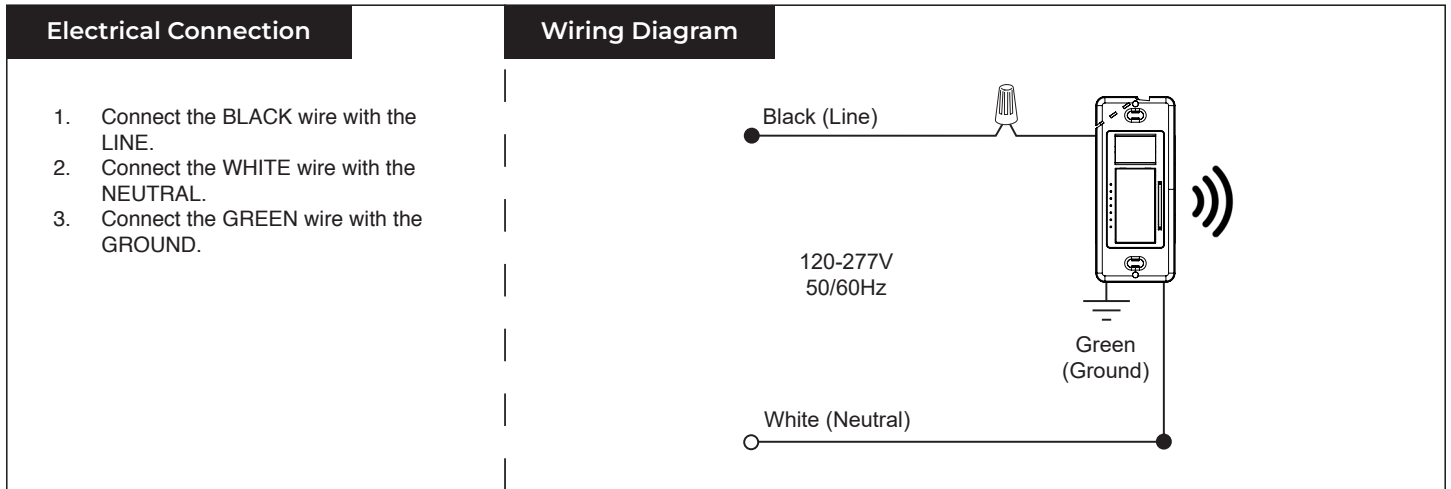

DIMENSIONS

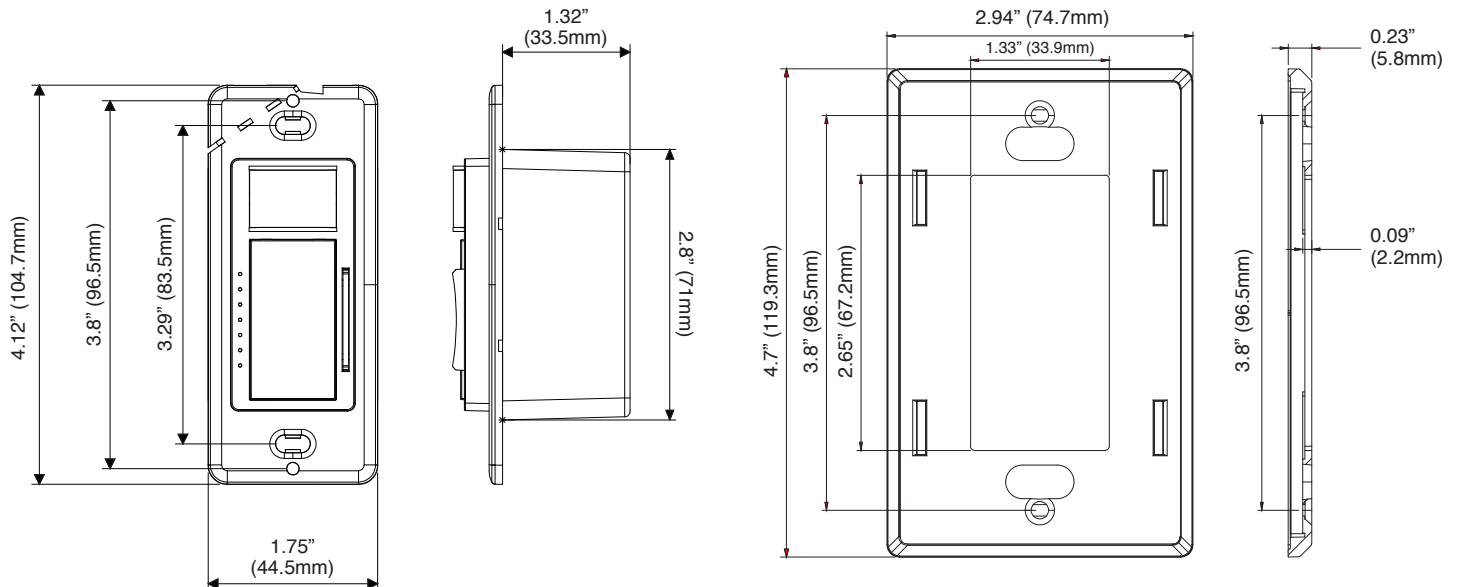 


AB-SPIR-WBM-AVK

TO INSTALL:

Wall-Box PIR Occupancy Sensor / Dimmer Switch

 PRODUCT DIAGRAM

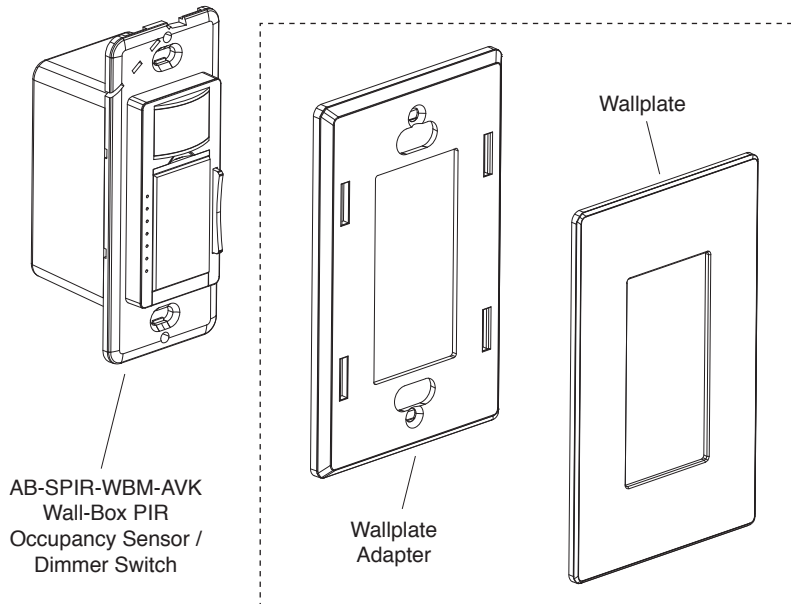

AB-SPIR-WBM-AVK COMMISSIONING

Download the AleoBlue for iOS from the App Store. Turn on your AleoBlue-adapted device and open the AleoBlue app. Log in or sign up according to the prompts.



 
Download the iOS
AleoBlue App




Watch the
Commissioning
Tutorial Video

DETECTION PATTERN

Coverage Top View

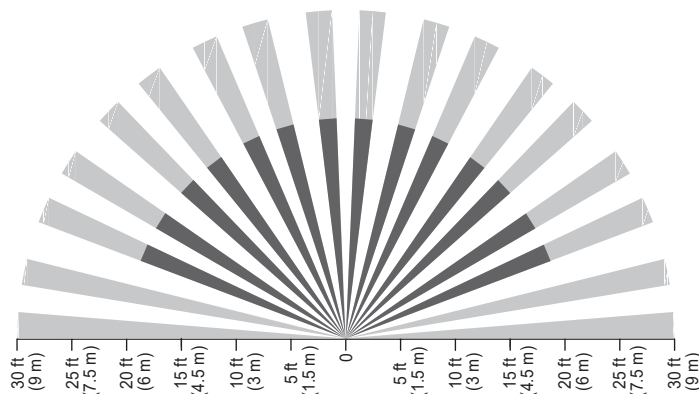

Coverage Side View

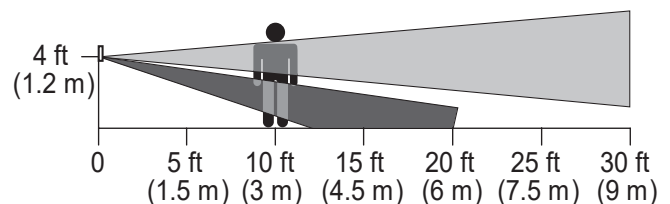 

Contents subject to change without notice. Visit www.aleolighting.com for warranty and specification information.

 
AB-SPIR-WBM-AVK

TO INSTALL:

Wall-Box PIR Occupancy Sensor / Dimmer Switch

BUTTON FUNCTIONS

Press and hold “ON / OFF” and top of Dimming Rocker for more than 5 seconds to reset the Bluetooth® connection.

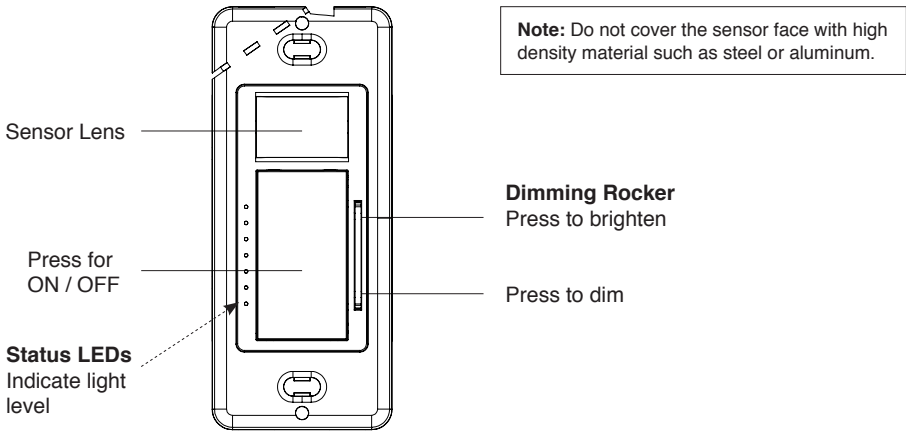

RATINGS

Electrical	
Motion Sensor	Passive infrared sensor
Input	120-277VAC 50/60Hz
Detection Angle	180°
Bluetooth® Range (Max.)*	100ft. (30m)
Physical	
Operating Temperature	32 to 104 °F (0 to 40 °C)

*Transmission Range is highly dependent on the integration of fixtures, surrounding environment and conditions. It is recommended to conduct testing for range accuracy.



© 2026 Aleo Lighting, Inc. All rights reserved. For informational purposes only. Reproduction in whole or part is prohibited without prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequences of its use.

Aleo Lighting + Controls
www.aeolighting.com
10988 Bloomfield Ave.
Santa Fe Springs, CA 90670
Ph: 877-358-8825