


# RKLS™ G2 Series

## Magnetic Module Retrofit Kit

Includes: RKLS-2-44, RKLS-2-22

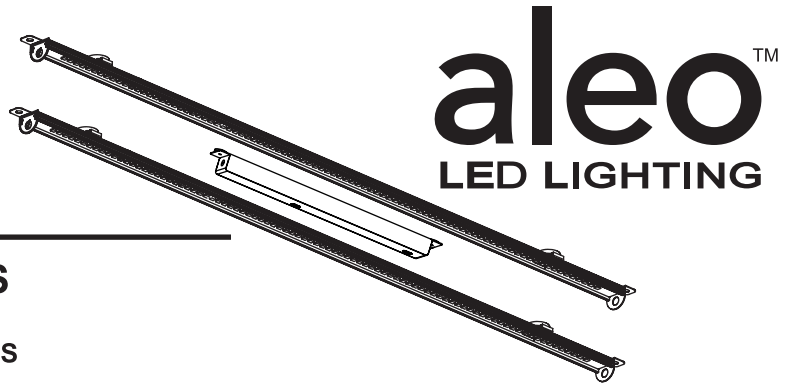

## INSTALLATION INSTRUCTIONS

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

#### WARNING

##### FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN SERIOUS INJURY OR DAMAGE TO PROPERTY

For your safety, thoroughly read these instructions and warnings in its entirety prior to installing or servicing this product. These instructions do not attempt to cover all installation and maintenance circumstances. If you do not understand these instructions or if additional information is needed, please contact your Aleo Lighting customer service.

#### WARNING

##### RISK OF FIRE, ELECTRIC SHOCK, or PERSONAL INJURY

To avoid risk of electrical shock, turn off power before installing or servicing.  
Verify that supply voltage is correct by comparing with the input voltage on the luminaire label  
Make all electrical and ground connections in accordance with NEC and any applicable code requirements

#### WARNING

##### RISK OF PERSONAL INJURY

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects  
Do not make or alter any open holes in any of the enclosures with wiring or electrical components during installation

#### WARNING

##### RISK OF FIRE OR ELECTRIC SHOCK

This product must be installed and serviced by a professional electrician in accordance with applicable federal, state, and local laws, regulations, and electrical code. If not qualified, do not attempt installation of this product. Contact a qualified electrician.  
Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings.  
Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components.

### SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Suitable for Dry or Damp Location

#### WARNING

This luminaire is made for permanent installation in ordinary (non-hazardous) locations in accordance with NEC code and all applicable local and federal codes. Do not use in applications with limited ventilation or high ambient temperature enclosures.


#### TURN OFF POWER BEFORE INSTALLING

#### Electrical Connection

Connect BLACK (line) driver lead to voltage supply Line position (HOT).  
Connect driver WHITE lead to the NEUTRAL supply position.  
Connect the GREEN ground lead to the supply ground lead.  
Connect Black+White+Red module wire harness.

\*Sensor is optional

#### Wiring Diagram

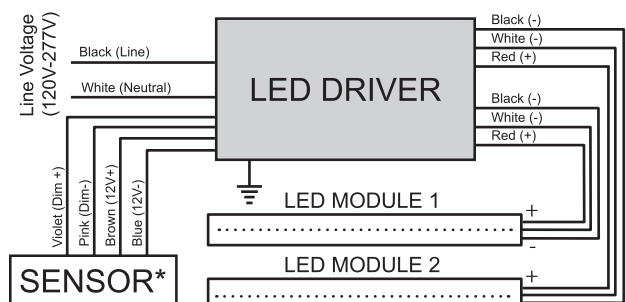


## TO INSTALL:

# RKLS™ G2 Series

## Magnetic Module Retrofit Kit

### Kit Contents

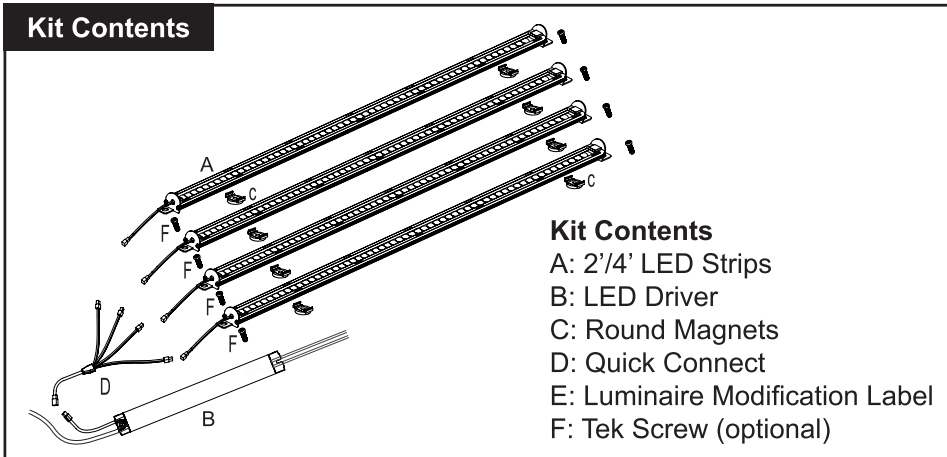

### Tools Required

Impact Driver w/ Hex Bit  
Drill  
Pliers  
Cutters  
Gloves  
Screw Driver (optional)



### Fixture Retrofit Compatibility

Troffer, Strip, Vapor Tight, Wraparound

### CAUTION: TURN OFF POWER BEFORE INSTALLING

Note: The lens on the modules can be removed, if there is lens on original by removing module end caps and sliding lens off.

### Typical Luminaire Retrofit

Remove lamps, original ballast cover and sockets / brackets. (**Figure A**)

Disconnect AC mains from ballast (**Figure B**). Optional: remove existing ballast.

OPTIONAL: Remove LED module lens by carefully removing module end caps and sliding lens off.

Place the LED Modules (A) into existing fixture housing with the desired alignment and placement. Secure the LED modules to the luminaire using provided Tek Screws (F). Ensure modules are securely fastened (**Figure C**)

**CAUTION:** Luminaire wiring and electrical parts may be damaged when drilling for installation of LED retrofit kit. Check for enclosed wiring and components.




Mount LED Driver (B) onto the luminaire, and secure with provided screws. Ensure proper driver grounding.

Place Retrofit Label (E) inside existing host fixture. (**Figure D**)

SEE PG.1 for Electrical Connection and wiring diagram instructions. Connect LED driver output wire harness to LED module input wire harness (Black+White+Red).

Connect AC mains to LED Driver input Leads.

OPTIONAL: Secure original ballast cover and lens onto fixture.

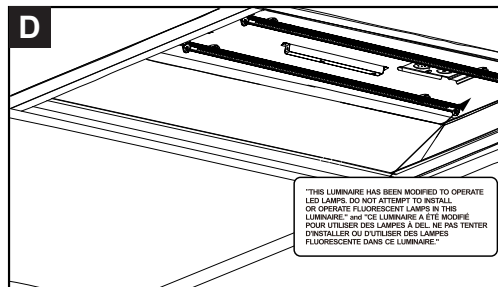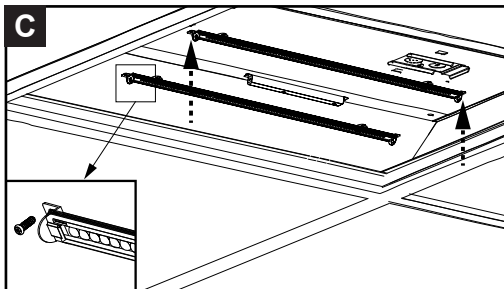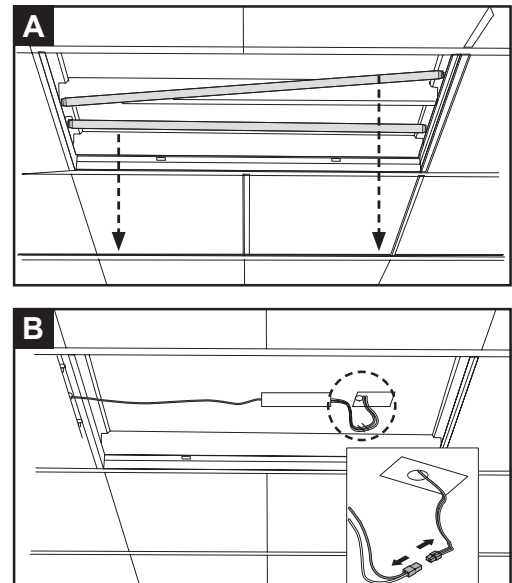

**aleo™**  
LED LIGHTING

Aleo Lighting, Inc.  
www.aleolighting.com  
10988 Bloomfield Ave.  
Santa Fe Springs, CA 90670  
Ph: 877-358-8825  
RKLS\_G2\_install\_guide\_rev01