WPE[™] Series

LED Wall Pack

Includes: WPE-30, WPE-45, WPE-60, WPE-75, WPE-90 ECO, WPE-120 ECO

INSTALLATION INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN SERIOUS INJURY OR DAMAGE TO PROPERTY

For your safety, thoroughly read these instructions and warnings in its entirety prior to installing or servicing this product. These instructions do not attempt to cover all installation and maintenance circumstances. If you do not understand these instructions or if additional information is needed, please contact Aleo Lighting customer service.

WARNING

RISK OF FIRE OR ELECTRIC SHOCK

This product must be installed and serviced by a professional electrician in accordance with applicable federal, state, and local laws, regulations, and electrical code. If not qualified, do not attempt installation of this product. Contact a qualified electrician.

WARNING

RISK OF FIRE, ELECTRIC SHOCK, or PERSONAL INJURY

To avoid risk of electrical shock, turn off power before installing or servicing.

Verify that supply voltage is correct by comparing with the input voltage on the luminaire label

Make all electrical and ground connections in accordance with NEC and any applicable code requirements

WARNING

RISK OF PERSONAL INJURY

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects Do not make or alter any open holes in any of the enclosures with wiring or electrical components during installation

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

WARNING

This luminaire is made for permanent installation in ordinary (non-hazardous) locations in accordance with NEC code and all applicable local and federal codes. Do not use in applications with limited ventilation or high ambient temperature enclosures.

TURN OFF POWER BEFORE INSTALLING

Electrical Connection

- 1. Connect BLACK (line) driver lead to voltage supply Line position (HOT).
- Connect driver WHITE lead to the NEUTRAL supply position.
- 3. Connect the GREEN ground lead to the supply ground lead.

If using 0-10V dimming:

- 4. Connect VIOLET lead to supply POSITIVE dimming lead.
- 5. Connect GREY lead to the supply NEGATIVE dimming lead.

If NOT using 0-10V dimming:

 Ensure VIOLET and GREY 0-10V dimming leads are properly capped.





TO INSTALL:

This product SHALL be surface mounted with recessed junction box above 4 feet (1.2 meter) high.

User should prepare necessary accessories and spare parts (not provided) including junction box, cross bar, junction box gasket, surface plate and screws.

JUNCTION BOX INSTALLATION

- 1. Loosen screws on the right side of the fixture. Disconnect the quick connector (between LED module and LED driver) inside the fixture and take off the front housing (**Figure 1**).
- Remove the knockout on the back of the housing, mount the housing and secure it onto the junction box inside the wall (Figure 3). Junction box gasket should create seal against wall surface. On uneven surfaces, you may use silicon sealant (not provided) to ensure tight seal against surface.
- 3. Connect supply leads. Refer to "WIRING" for more details (Figure 4).
- 4. Mount the front of the housing back on the back housing. Re-connect the quick connector (**Figure 5**).
- 5. Screw two bolts to tighten and close the fixture (**Figure 6**). Make sure all gaskets are seated properly and all bolts and screws inserted and tightened firmly. Use silicone sealant (not provided) all along the bottom of the fixture to ensure tight seal against surface.

B SURFACE MOUNT WITH CONDUIT FEED INSTALLATION

- 1. Loosen screws on the right side of the fixture to open the fixture. Disconnect the quick connector (between LED module and LED driver) inside the fixture and take off the front housing (**Figure 1**).
- 2. Remove the 1/2" plug from the side of the fixture, and feed the conduit into the back housing through the knockout (**Figure 2**).
- 3. Mount the back of the housing onto the wall (**Figure 3**). Gasket on back housing should create seal against wall surface. On uneven surfaces, you may use silicon sealant (not provided) to ensure tight seal against surface.
- 4. Make supply wiring connection. Refer to "WIRING" for more details.
- 5. Mount the front of the housing to the back of the housing. Re-connect the quick connector (**Figure 5**).
- Secure the two bolts to tighten and close the fixture (Figure 6). Make sure all gaskets seated properly and all bolts and screws inserted and tightened firmly. Use silicone sealant (not provided) all along the bottom of the fixture to ensure tight seal against surface.





Aleo Lighting, Inc. www.aleolighting.com 10988 Bloomfield Ave. Santa Fe Springs, CA 90670 Ph: 877-358-8825

© 2021 Aleo Lighting, Inc. All rights reserved. For informational purposes only. Reproduction in whole or part is prohibited without prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequences of its use.